

# H-D® Spun Aluminum Face Tachometer Removal Guide

For installation of the Heavycycles Tachometer Needle Lighting Modification

## Tachometer Harness Wire Color Codes (for reference):

- Black – Ground, [G] on tachometer housing
- Orange w/White – +12v Acc. power, [+] on tach housing
- Pink (or Yellow) – Tachometer signal, [S] on tach housing



Fig. 1

Carefully remove socket head flat screw from rear of tachometer cup (Fig. 1). This one screw holds the cup on and the whole assembly together. Hold onto tach cup when removing screw to prevent it from falling. Set cup aside.



Fig. 2

Slide tachometer up and out of mount (Fig 2).

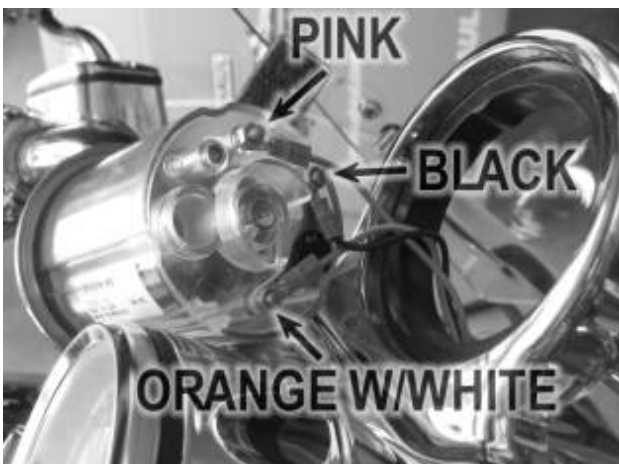


Fig. 3

Remove nuts and wires from terminal posts on rear of tachometer, noting locations (Fig. 3). Be careful not to lose your nuts, they're quite small.

The wire locations are also marked on tach housing.

Tachometer removal complete!